

UNIVERSAL DVD VIDEO REMOTE CONTROLLER CODE FORM FOR THE COMPONENTS

RM-900D

Please read the instruction carefully before use


About this Remote controller

RM-900D Made by KeLang Electronics Co.,Ltd. is the latest multi-functional remote controller for hundreds of famous-brand DVD, which collects most functions of other Remote Controller. It creates the convenient way of setting by fast looking through pictures to find codes.

RM-900D is your best choice when your original Remote Controller is missed or damaged.

Load battery

Open cover of battery compartment and load two simple new batteries (not enclosed). As legend:

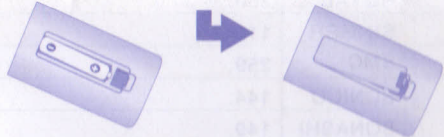

△ Notice on battery

- According to electrode sign to load batteries correctly.
- Please use two pieces-new AAA(7#) alkaline battery.
- Once the product will be free for a long time, please unload batteries to avoid leaking liquid.
- The time for replacing battery no more than 2 minute, otherwise you need to reset it.

Enactment code manual

- Find out one code (3 digital) from the CODE LIST.
- First enter "set up" the key is not put, and then enter the key of "power". Then release two keys at the same time, the indicator lamp of the job is getting on at this moment, the remote controller enters codes and imputs the state.
- Orderly depress 3 of numeral keys to key in the code, its LED should off.
- Inspect every key's weather or not has normal efficacy. If has, the step of enactment code is completed.

E.g. premises your player is SONY band DVD.

Look out its code from LIST CODE

Depress SET first

SET

Depress POWER second

POWER

LED lights

0 4 0

LED off

Inspect key's function — Not

Enactment complete

Auto Scan Function:

If you have tried all the codes in the code list and still failed in controlling or if your DVD is not included in the code list, please try the following steps:

1. Power on your DVD and insert a disc; please be sure that DVD First, Press "set" and do not release; at the same time press "power". If indicator Light is on, release the above buttons;
2. Press "volume+" (or "volume-") on the Remote controller, check whether it is normal that the DVD open (or close), And repeated this operation, until it being normal, then press "set" the key.
3. At this time, Indicator light is out. Setting is accomplished. Check other functions of the Remote Controller.
4. If some functions cannot be realized, Please try step 2.3 again until you find the correct code.

Design Panel

Indicates the working mode To turn on and off

Disp System

Numeral key choose song

Pause Track Next Prevenient

Prog

Rightward

Enter Lang Eitle

To turn on and off Volume increase Volume Decrease

Numeral key choose song

Returns to last operation

Forward Suspend Back Play Upward Setup

Leftward Menu To mute the volume Downward Set Sub



Cautions

- Maybe the product doesn't apply to few models of players listed in CODE LIST.
- Remote controller in go on when working, function that show its might didn't accord with function of panel
- Don't disassemble the product Don't water or drop the product
- Don't store or use the product under warm or damp environment.
- Don't clean the product with organic solvent fluids such as light petrol, benzene.

Troubleshooting

If the product cannot work normally. Please insure every step as following:

- Please according to this Instruction to set the product carefully. If the product is inefficacy with first code, Please adopt next to reset in sequence.
- Check weather there are or not any obstructions between the product and player.
- Check weather does or not the product pinpoint at player straight.
- Check weather there is or not a infrared remote control receiving unit in player already.
- Check the battery voltage and direction of polarity.

Service After Sale

there are any troubles with the product or it can not work provisionally. Within usage, please connect with local sale agency or the company straight. We shall provide our nice service to you. Don't disassemble the product to repair without the company's approbation, otherwise users ought to absorb servicing cost.

Technology Parameter

Material : ABS
Operable distance : More than 8 meters
Power requirements : DC 3.0V (Two size AAA)
Battery Duration : About 12 months



KE LANG ELECTRONICS INDUSTRY CO.,LTD

*The company own all ultimate explain rights of the instruction, its design and technologic parameter will be modification without notice.



RM-900D

Universal DVD Remote



CODE FORM FOR THE COMPONETS

BRAND	CODE
TCL	000.015.039.054.055.186.306.
XINKE	001.010.179.
MALAIA	002.009.023.024.073.099.164.297.
NOTAUS	003.035.071.079.080.081.082.090.093.190.312.
XIANKE	011.020.038.059.060.076.168.198.
QISHENG	005.037.092.173.288.302.313.318.
PHILIPS	012.069.203.321.323.
BBK	018.021.027.028.033.048.078.091.172.199.
SKYWORTH	018.022.025.026.032.034.058.096.097.174.175.185.187.294.299.305.311.324.
HAI ER	098.099.100.
DAEWOO	086.087.223.224.225.226.227.228.279.286.315.
SANSUNG	004.006.017.049.177.201.254.278.
XIANDAI	085.
YAJIA	006.130.
TOSHIBA	041.069.102.262.
RI LI	017.100.
CHANGHONG	54.194.195.
SHARP	136.257.258.
AIWA	126.202.217.
SONY	040.042.215.273.
JINGWEI	011
SANSUI	013.046.
PANASONIO	014.134.283.
DESAY	026.074.101.183.298.300.
HUABAO	018.029.061.062.063.300.
KETAI	030
JINGE	018.059.060.076.
JINWANG	035
LSM	036.076.
PANDA	038.051.052.053.056.166.176.
TIANLONG	042

BRAND	CODE
ANQIAO	043.249.
XIANFENG	044.135.252.
SANLING	242
SANYANG	255.256.
EDUCATION	056.057.303.
BULANTE	064.065.
AEWZ	066.067.
DIHE	070.077.123.124.308.
KENWOOD	075.127.235.236.
CAIXING	088.095.
JIEKE	089.293.295.296.312.
QIXING	092.
WEIFA	050
HUAJIA	094.
AILANG	102.103.104.105.
XITIANGLI	106.
FEILE	107.
ZHIGAO	108.
LEHUA	109.
AIDUO	111.189.
SONGDING	112.
JUDA	113.
ZHUREN	114
SVA	088.118.119.179.
YUXIN	120.121.
WANYAN	099.122.
AMOISONIC	138.164.182.193.
DINGTIAN	155.
JINGCHUANGU	031
YINGKE	165.
XIANQI	148.
SHIDAI	169.
JUKE	170.
SHIDA	184
YOUBISHENG	188
HAIXING	069.192.304.
KANGJIA	196.237.
SHUOHUA	204.
AIYUN	322.
AODIER	030.
HUAJIA	094.
MALANSI	069.321.
XIANPAI	070.

BRAND	CODE
LONGZHIPAI	289.
FENDA	290.
JINWEIGE	291.292.
WANBAO	296.
MINGTIAN	149.301.
AODELONG	307.
JUGAO	309.
SHILONG	310.
PAIGAO	316.
GEWANG	328.
ACRE	125.
AIKO	216.
AKRAOKE	323.
AKUSTIC	216.272.
AKISHI	218
APEX	219.
AUDIOVOX	220.
AVLIGTH	069.
BUSH	131.
CLASSIC	221.281.282.
COBY	222.
CYBERHOME	320.
DENON	042.
DIGIXMEDIA	229.
DVD	016.019.274.
ELEKTRA	227.230.
FISHER	255.275.
FUSSION	231.
GE	253.
GO VIDEO	232.233.
GPX	014.
HAOJI668E	117.
HAOJI	068.
HITER	089.
JMB	132.
JVC	045.128.234.
KARDON	284.
KARAOKE	323.
LASONIC	238.239.
LAFAYETTE	250
LG	008.103.
LINITRON	083.
MAJESTIC	240.277.

BRAND	CODE
MEGA TANSS	241.
MITSUI	239.243.244.
MTB	231.245
MITZU	216.
NAKAMICHI	246.
NAPA	247.285.
NORCENT	248.
OKON	072.
ORITRON	133.
PHILCO	250.251.276.280.
POWER SOUND	216.263.
PROSONIC	216.
RCA	253
ROYAL	250.
SINGER	115.
SMC	259.
SONICO	144.
SONASHI	149.
SOUND TRACK	271.
SUPERSONIC	250.260.
SUPER	116.
TECHNICS	171
TEAC	261.
TOP TEC	083.
THOMSON	083.253.
UNIUREX	263.
UNITRON	083.
VCD2	216.
VICTOR	047.084.
VIDEO CD	267.268.269.270.
VOX	264.
WEAG TANSS	216.
YAMAHA	137.265.
YAMAKAWA	266.
ZONDA	023.
OTHER	006.007.013.016.018.019.031.058.059.069.110.129.139.140.141.142.143.144.145.146.147.149.150.151.152.153.156.157.158.159.160.161.162.163.167.178.179.180.181.191.197.198.200.205.206.207.208.209.210.211.212.213.214.216.274.287.314.317.319.324-599.