

Tabela nastavaka po tipu sa brojem komada

Tip nastavka	Broj komada
Phillips (PH0000)	2
Phillips (PH000)	2
Phillips (PH00)	2
Phillips (PH0)	2
Phillips (PH1)	2
Phillips (PH2)	2
Ravni (SL1.0)	2
Ravni (SL1.3)	2
Ravni (SL1.5)	2
Ravni (SL2.0)	2
Ravni (SL2.5)	2
Ravni (SL3.0)	1
Ravni (SL3.5)	1
Ravni (SL4.0)	1
Torx (T1)	1
Torx (T2)	1
Torx (T3)	1
Torx (T4)	1
Torx (T5)	1
Torx (T6)	2
Torx (T7)	2

Torx (T8)	2
Torx (T9)	2
Torx (T10)	2
Torx (T15)	2
Torx (T20)	2
Torx sigurnosni (T6H)	1
Torx sigurnosni (T8H)	1
Torx sigurnosni (T10H)	1
Torx sigurnosni (T15H)	1
Torx sigurnosni (T20H)	1
Pentalobe (P2)	1
Pentalobe (P5)	1
Pozidriv (PZ000)	2
Pozidriv (PZ00)	2
Pozidriv (PZ0)	2
Pozidriv (PZ1)	1
Pozidriv (PZ2)	1
Hex metrički (H0.7)	1
Hex metrički (H0.9)	1
Hex metrički (H1.0)	1
Hex metrički (H1.3)	2
Hex metrički (H1.5)	2
Hex metrički (H2.0)	1
Hex metrički (H2.5)	1
Hex metrički (H3.0)	1
Hex metrički (H3.5)	1

Hex metrički (H4.0)	1
Tri-wing (Y0.6)	2
Tri-wing (Y1.0)	2
Tri-wing (Y1.5)	2
Tri-wing (Y2.0)	1
Tri-wing (Y2.3)	1
Tri-wing (Y3.0)	1
Trokutni (Δ 2.0)	1
Trokutni (Δ 2.3)	1
Trokutni (Δ 2.7)	1
Trokutni (Δ 3.0)	1
Kvadrat (S0)	1
Kvadrat (S1)	1
Kvadrat (S2)	1
Nut Driver (2.5#)	1
Nut Driver (3.0#)	1
Nut Driver (3.5#)	1
Nut Driver (4.0#)	1
Nut Driver (4.5#)	1
Nut Driver (5.0#)	1
SIM alat	2
MID alat	2
Clutch drive (2.3)	1
Clutch drive (2.6)	2