

UNIVERSAL FOR ONE BRAND

Use for LG SERIES: TV/LCD/LED/HDTV
(Use for 95% SAMSUNG/GOLDSTAR SERIES TV)

Operating Manual

 
Thanks for choosing this remote control. Please install the batteries and try. If it works well, no need to set. If it does not work, please refer to the following setting method. This remote control could save the setting when changing batteries. It could be your best choice to replace the original remote control.



Model: LG-3



Model: LG-18

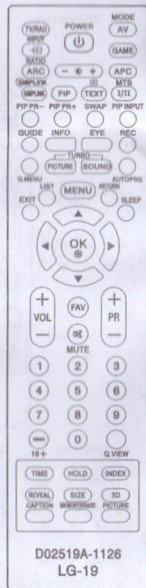

Model: LG-19

Before use this remote control, please read this manual as much as possible.

It could directly control 95% models of LG brand. No need to set. If it doesn't work, please choose one of the following setting ways to use.

1. OPERATING MANUAL

A. Codes Input

Code 001,002,003,004,005,006,007,008,009
List: 010,011,012,013,014,015,016,017,018

- 1). Press and hold the key [MUTE] and [POWER], after 3 seconds the LED will be lit. Release the keys, input the three codes (001-018) from Code List. When the Codes Input finished, the LED will turn off.

NOTE: If the three codes are invalid, the LED will flash twice and keep light, if the codes are right, LED light will turn off.

- 2). Please try to use the remote control. If it doesn't work well, please repeat from Step 1.

B. [MENU] key Search

- 1). Press and hold the key [MENU], after 5 seconds the LED will start to flash and remote control enters into search state.
- 2). When the MENU appear on the TV, please release the key.
- 3). Please try to use the remote control. If it doesn't well, please repeat from Step 1.

C. [MUTE] key Search

- 1). Press and hold the key [MUTE], after 5 seconds the LED will start to flash and remote control enters into search state.
- 2). When the MUTE appear on the TV, please release the key.
- 3). Please try to use the remote control. If it doesn't well, please repeat from Step 1.

2. RESTORE TO FACTORY STATE

 
 
Press and hold the key [MUTE] firstly, then press and hold number key [0]. After 5 seconds the LED will flash 3 times and remote control will restore to factory state.

3. CAUTION

- ◆ Please note the positive and negative terminals of the battery.
- ◆ Before use, it is best to set Remote Control to factory state.
- ◆ Only your TV have receiving function or receiving equipment then can use this remote.
- ◆ If improper operation, the remote may died so now you should take out the battery and wait 20 minutes then put in the battery and re-set.
- ◆ If some function keys don't work, it may be the key doesn't work for your TV model or your TV doesn't have that function.
- ◆ If the remote control doesn't work for long time, please take off the batteries. In case of the batteries go bad and damage the Remote control.

4. Compatible Remote Control Model

Due to too many Remote Control models, we only list some below. If your remote control is similar to the picture, the our remote can control it.

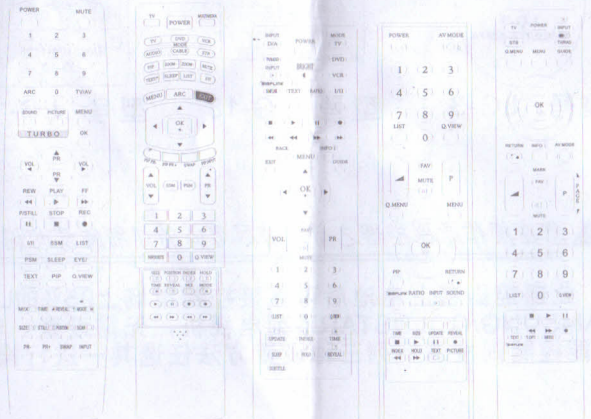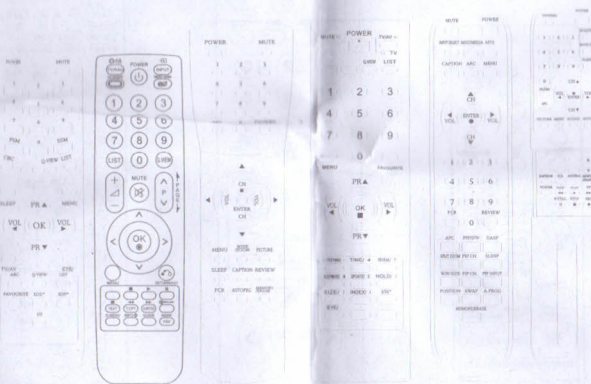

6710V00112D 6710V00151E MKJ39170804 MKJ42519604 MKJ40653802