

 
SM.0250386AE000

LG-1LC UNIVERSAL REMOTE CONTROL FOR LG TV

SMART LIVE TV APPS 3D

Thanks for choosing this remote control. Please install the batteries and try. If it works well, no need to set. If it does not work, please refer to the following setting method. This remote control could save the setting when changing batteries.

▲ Before use this remote control, please read this manual as much as possible. It could directly control 99% models of LG TV brand, no need to set. If it doesn't work please choose one of the following setting ways to use.

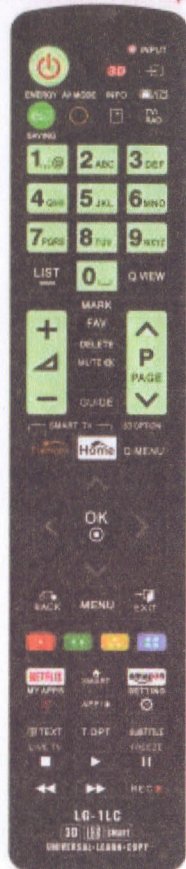


A. INPUT CODE

Step 1 Press and hold the key [MUTE] and [POWER] keys, after 3 seconds, the LED light will come on. Release the keys.



Step 2 Enter the 3 digit code. If the code is right, the LED light will go off. If the code is wrong, the LED light will still be on. If this happens, try to enter the code again as there may have been an error the first time

 CODE LIST: 001,002,003,004,005,006,007,008,009
010,011,012,013,014,015,016,017,018,019

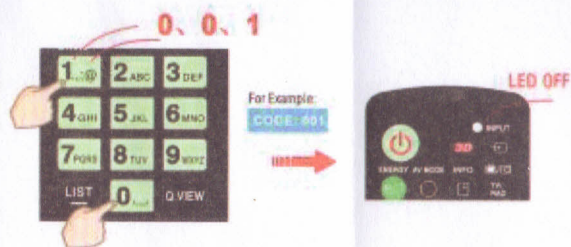

Step 3 Please check the function of Remote . If it doesn't work well, please you can try one of the other codes and repeat the process from step 1.

[Note]: If you want to exit set, please press [MUTE] key.

B. CODE INQUIRY

To know what codes the remote control is using:

Step 1 Press and hold the key [MUTE] firstly, then press [POWER] key, after 3 seconds LED will light, release keys.



Step 2 Input [9],[9],[0] with number keys. LED will flash 2 times and be off.



Step 3 Press [1]/[2]/[3]. For example, Pressing [1] Key, LED will start to flash. The flashes times is the code's first number. If code number is [0], LED will not flash.

For example: Remote used [0.0.5] code before



C. LEARNING FUNCTION

It's suitable for IR Remote. Not suitable for Bluetooth and Wireless Remote.

Step 1 Press and hold the key [MUTE] and [VOL+] about 5 seconds, the LED will be on. Release the them. It is ready to learn.



Step 2 Point the original remote control to LG-1LC remote. The distance should be within 1~3cm.



Step 3 Press any key of the original remote control, the indicate on LG-1LC remote control will flash after receive code, release it. Then press the key on LG-1LC remote control. Indicator light flashes 2 times and keep. Please repeat Step. 3 to continue learning other function keys.



Step 4 After learning all the keys, please press and hold the key [MUTE] firstly, then press [VOL-], the LED will be off. The learning will be saved.



NOTE: During the learning process, if no key is pressed in 25 seconds the learning state will be exited without saving.

D. One-button COPY(learn) function

Note: A and B are identical learning remotes.

 
A: The remote control that has been fully learned
B: Remote control that needs to copy

Step 1 Align the head of remote control [A] with the head of remote control [B] at a distance of 1~3 cm and do not shake




Step 2 Operation of B remote control:

Press [MUTE] key and number key [3] at the same time for more than 3 seconds. When the LED is light, release them. Remote is ready to copy

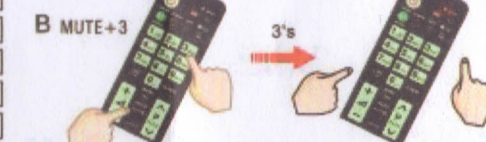

Step 3 [A] remote control operation:

 Press the remote control [MUTE] and number key [1] at the same time for 3s. When LED is light, then release the two keys. When the working lights of the two remote controllers are flashing, Copy function is working. When the LED light of two remotes flash three times slowly and then off. It means copy is completed.

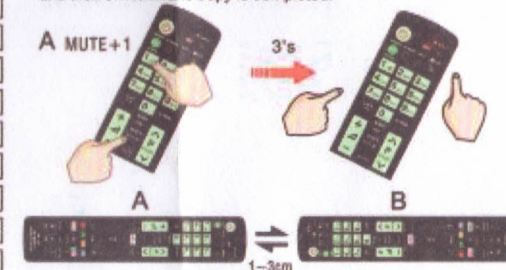

Note : Please check the function of B remote, if some keys not working, please repeat from Step. 1~3
If you want to exit set, please press [MUTE] and [VOL-] keys.

[PLEASE KEEP IT PROPERLY FOR LATER USE]