




MODEL:T750D

- | | | | | | |
|----------|---|-----------------------------------|----------|---|---------------|
| A |  | (M8x55)-6pcs | F |  | (M6x10)-16pcs |
| B |  | (M8x60)-4pcs | G |  | (M8x15)-4pcs |
| C |  | (M6)-1pcs | H |  | (M5x15)-8pcs |
| D |  | (M8)-10pcs | I |  | (M6x15)-8pcs |
| E |  | ($\phi 18 \times \phi 8$)-16pcs | J |  | (M8x15)-8pcs |




STEP-1a

For two column assembling
用于两柱组装

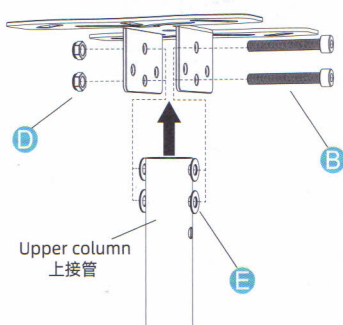

STEP-1b


For three column assembling
用于三柱组装

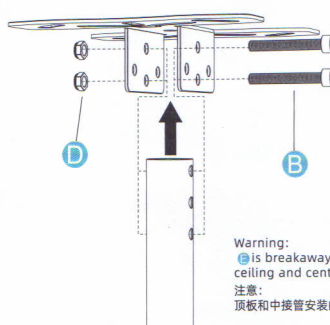

Warning:
⚠ is breakaway when install ceiling and center column.
注意:
顶板和中接管安装的时候不需要垫片 ⚠.


STEP-2a

Mark and drill 4 pilot holes on ceiling
attach the mounting bracket to the ceiling
在吊顶标记并钻出4个安装孔位并将背板固定在吊顶

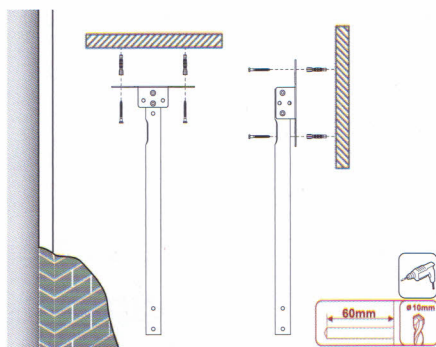


STEP-2b

Mark and drill 4 pilot holes on ceiling
attach the mounting bracket to the ceiling
在吊顶标记并钻出4个安装孔位并将背板固定在吊顶

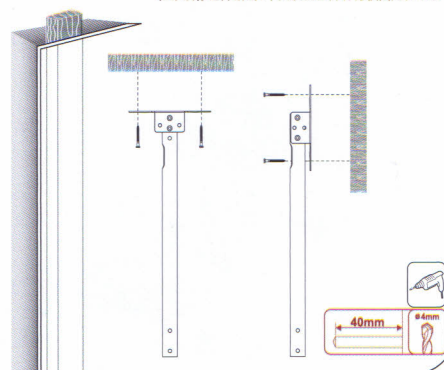


STEP-3

Assembly column 组装接管

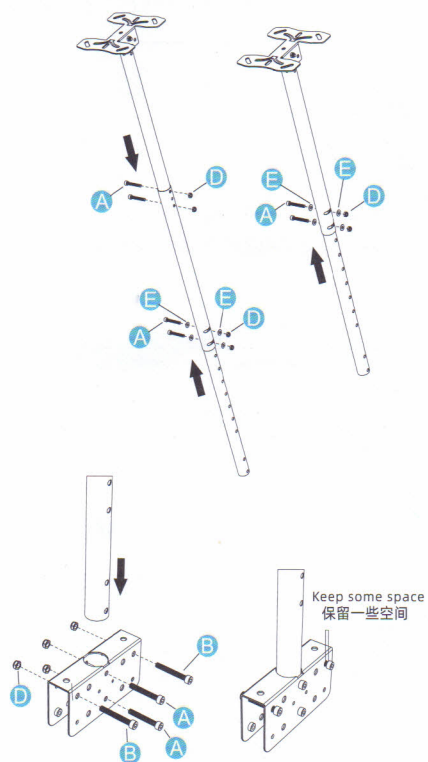

STEP-4

Attach the mounting plate to the TV 将挂钩安装到电视上

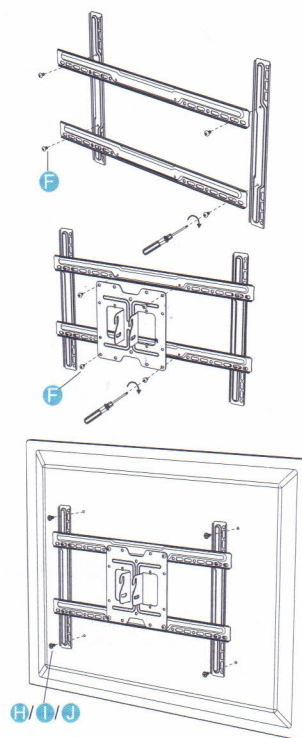

STEP-5

Put TV assembly onto mount 把电视组件安装到支架上

