



MODEL:T750


- | | | | |
|----------|--------------|----------|----------------|
| A | (M5x15)-4pcs | F | (M8x55)-4pcs |
| B | (M6x15)-4pcs | G | (M8x60)-3pcs |
| C | (M8x15)-4pcs | H | (ø18xø8)-12pcs |
| D | (M6x10)-8pcs | I | (M8)-7pcs |
| E | (M8x15)-2pcs | J | (M6)-1pcs |



STEP-1a For two column assembling 用于两柱组装

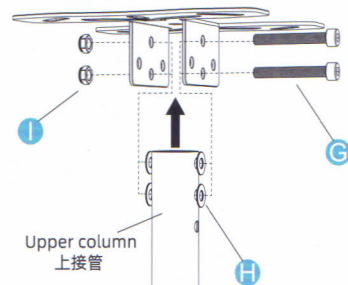


STEP-1b For three column assembling 用于三柱组装

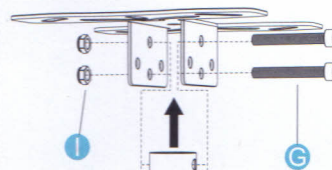


Warning:
Ⓜ is breakaway when install ceiling and center column.
注意:
顶板和中接管安装的时候不需要垫片Ⓜ。

STEP-2a Mark and drill 4 pilot holes on ceiling attach the mounting bracket to the ceiling 在吊顶标记并钻出4个安装孔位并将背板固定在吊顶

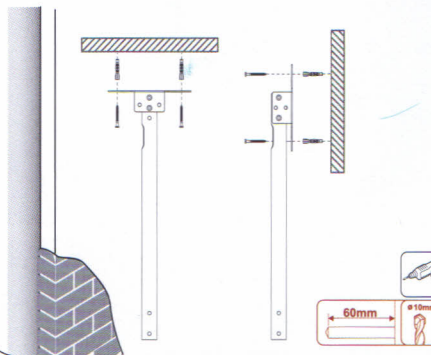


STEP-2b Mark and drill 4 pilot holes on ceiling attach the mounting bracket to the ceiling 在吊顶标记并钻出4个安装孔位并将背板固定在吊顶

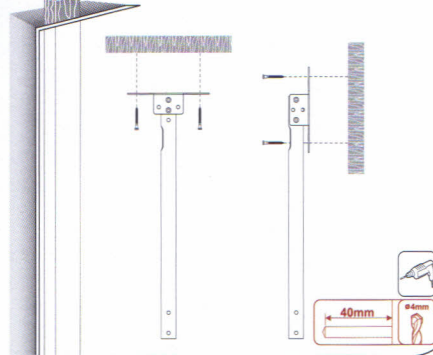


STEP-3

Assembly column
组装接管

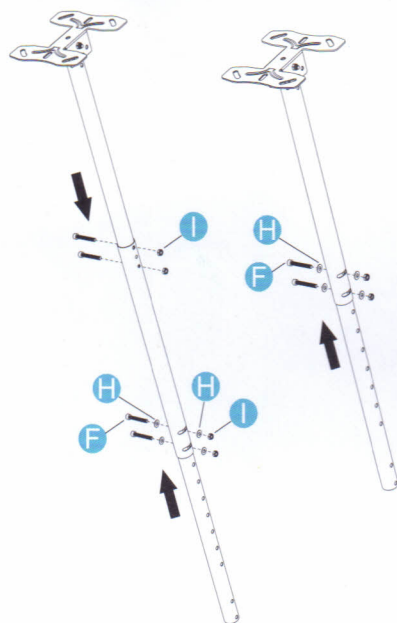

STEP-4

Attach the mounting plate to the TV
将挂钩安装到电视上

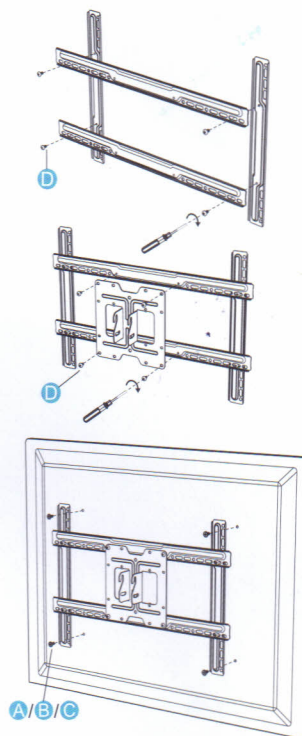

STEP-5

Put TV assembly onto mount
把电视组件安装到支架上

